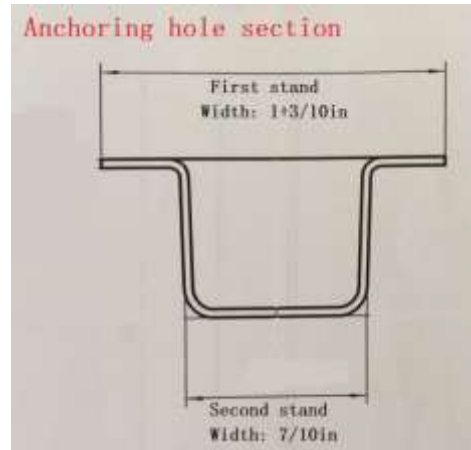


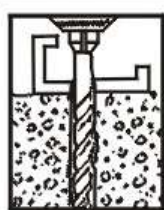
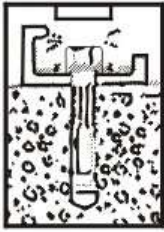
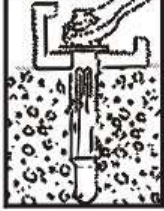
Anchoring Instruction for MyCube Fire Safe

1. Open the safe, and there is a two-step anchoring hole on the center of the safe bottom as in the below image. The hole is filled with fire-proof concrete, before anchoring, you will need to clean the concrete by using a drill.



2.1 Anchoring the safe to concrete ground, please follow below instructions (an expansion screw is provided with the safe).

CONCRETE SLEEVE ANCHOR INSTALLATION

	1. Use a 5/8" Masonry Drill Bit (not included). Drill hole to any depth, minimum of 5" deep. Clean out hole.
	2. Insert assembled anchor into hole, so that the washer or head is flush with materials to be fastened.
	3. Expand anchor by tightening nut.

Note: To anchor safe to wood, please use lag screws (not included).

2.2 Anchoring the safe to a wood surface, you will need a M12*100mm screw as below type.



2.2.1 Use a 3/8" drill bit, drill a hole to the wooden sleeve, minimum of 3" deep.

2.2.2 Tighten the screw with tightening nut. Use the washer provided with the safe to secure the screw in place.